

What to do if...  
What to do if...



A tire punctures

P. 642 If you have a flat tire



The engine does not start

P. 650 If the engine will not start

P. 97 Engine immobilizer system

P. 660 If the battery is discharged



The shift lever cannot be moved out

P. 652 If the shift lever cannot be shifted from "P"



The engine coolant temperature gauge enters the red zone

P. 663 If your vehicle overheats



Steam can be seen coming from under the hood



The key is lost

P. 655 If you lose your keys



The battery runs out

P. 660 If the battery is discharged



The doors cannot be locked

P. 49 Doors



The horn begins to sound

P. 99 Alarm



The vehicle is stuck in mud or sand

P. 666 If the vehicle becomes stuck



A warning light or indicator light comes on

P. 630

If a warning light turns on or a warning buzzer sounds...



## nWarning lights



Brake system warning light (red indicator)

or



P. 630



"ABS" warning light

or



P. 631



Brake system warning light (yellow indicator) P. 631



Low fuel level warning light P. 632



SRS warning light P. 631



Open door warning light P. 632



Charging system warning light P. 630



Malfunction indicator lamp

or



P. 631



Driver's seat belt reminder light P. 632



Front passenger's seat belt reminder light P. 632



Master warning light with warning message P. 632



Electric power steering warning light P. 631



Pre-collision system warning light P. 631



Tire pressure warning light P. 632